Industrial PC Platform NY-series IPC Machine Controller

The future will be IT driven, we make you part of it

Our IPC Machine Controller combines proven machine automation with the freedom to use PC technology: working together but independently. So you can leverage Big Data, NUI and IoT to explore manufacturing innovation with no compromise on traditional PLC reliability and robustness. It makes engineers unstoppable and machines innovative yet reliable.




NY512-1

ORRON

NY532-1

Features

- OS independency allows controller to continue to control if a Windows OS crashes
- Primary task period 500 μs/24 axes
- Retain/non-retain variables 4 MB/64 MB
- 16 to 64 axes
- 192 EtherCAT slaves
- Secure boot and recovery methods
- Powerful 4th-generation CPU technology for optimum performance
- No internal cables in the PC part eliminates faults, maximizes uptime
- Unique simplified thermal design to cut downtime
- Two Gbps Ethernet, one EtherCAT, one DVI, one UPS I/O connector
- Two USB2.0 and two USB3.0 for fast data-transmission

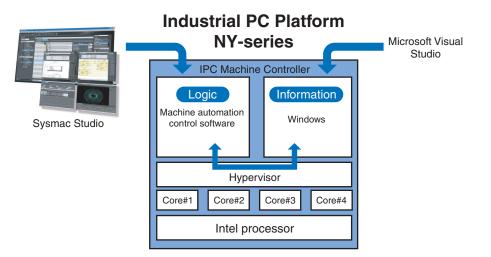

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Microsoft, Visual Studio and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.


EtherCAT® is a registered trademark of Beckhoff Automation GmbH for their patented technology.

EtherNet/IP[™], DeviceNet[™] are trademarks of the ODVA.

The SD and SDHC logos are trademarks of SD-3C, LLC.

Intel, Celeron and Intel Core are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries. Other company names and product names in this document are the trademarks or registered trademarks of their respective companies. The product photographs and figures that are used in this document may vary somewhat from the actual products.

System Configuration

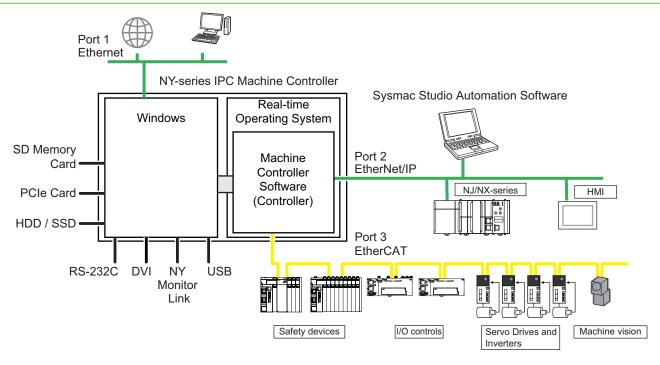

Model Number Structure

The purpose of this model number structure is to provide understanding of the meaning of specifications from the model number. Models are not available for all combinations of code numbers.

NY	5 🗆 🗆 - 🗆 🗆 0 0 - 🗆						
1	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17						
Item	Description	Option					
1	Series name	NY: NY-series Industrial PC Platform					
2	Controller specifications	5: Large scale, high speed and high precision control application for up to 64 axes.					
3	Model type	1: Industrial Box PC 3: Industrial Panel PC					
4	Sequential number	2 or more					
5	Function module	1: Standard					
6	Number of axes for motion control	3: 16 axes 4: 32 axes 5: 64 axes					
7	Additional function software module	0:					
8	Reserved	0:					
9	Expansion slots 1: 1 PCle slots						
10	Frame type	1: Aluminum frame, black, and projected capacitive touch type X: No display (Industrial Box PC)					
11	Display size	1: 12.1 inch model 2: 15.4 inch model X: No display (Industrial Box PC)					
12	OS	1: Windows Embedded Standard 7 - 32 bit * 1 2: Windows Embedded Standard 7 - 64 bit					
13	Processor	1: Intel [®] Core™ i7-4700EQ Processor 4th generation CPU with Fan Unit for active cooling					
14	Main memory	3: 8 GB, non-ECC					
15	Storage	8: 32 GB, SSD SLC 9: 64 GB, SSD SLC C: 320 GB, HDD K: 128 GB, SSD MLC					
16	Optional interface	1: RS-232C 2: DVI-D 6: NY Monitor Link					
17	Logo	0: OMRON 2: Customization * 2 X: No display (Industrial Box PC)					

*1. For the 32 bit version, consult your OMRON sales representative.

*2. Customization only available in Europe.

Ordering Information

NY-series IPC Machine Controller

Recommended models

The industrial PC Platform has extended configuration possibilities to meet your requirements, below an overview of the most used and recommended models. Selecting one of the models below will bring the benefit of faster delivery times.

In case your preferred model is not listed below, please contact your Omron representative to discuss the possibilities.

			Spec	ifications						
Product Name	Operating system	CPU type	Number of motion axes	RAM memory (non-ECC type)	Storage size	Interface option	Model			
			64		64 GB SSD type (SLC)		NY512-1500-1XX21391X			
			04		320 GB HDD type		NY512-1500-1XX213C1X			
Industrial		Intel [®] Core™ i7-	32	8 GB	64 GB SSD type (SLC)	RS-232C	NY512-1400-1XX21391X			
Box PC		4700EQ	32		320 GB HDD type	- K5-2320 	NY512-1400-1XX213C1X			
			16		64 GB SSD type (SLC)		NY512-1300-1XX21391X			
					320 GB HDD type		NY512-1300-1XX213C1X			
			64		64 GB SSD type (SLC)		NY532-1500-111213910			
			64 32		320 GB HDD type		NY532-1500-111213C10			
Industrial	Windows Embedded	Intel [®] Core™ i7-						64 GB SSD type (SLC)		NY532-1400-111213910
Panel PC	Standard 7 - 64bit			8 GB	320 GB HDD type	- RS-232C	NY532-1400-111213C10			
			10	1	64 GB SSD type (SLC)		NY532-1300-111213910			
			16		320 GB HDD type		NY532-1300-111213C10			

Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

Product name	Specifications	Number of licenses	Media	Model
Sysmac Studic Standard	Windows 7 (32-bit/64-bit version)/Windows 8 (32-bit/64-bit version)/Windows 8.1 (32-bit/64-bit	_ (Media only)	DVD	SYSMAC-SE200D
Edition Ver.1.□□	version)/Windows 10 (32-bit/64-bit version) The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer). For details, refer to the Sysmac Integrated Catalogue (P072).	1 license *	_	SYSMAC-SE201L

* Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

Collection of software functional components Sysmac Library

Please download it from following URL and install to Sysmac Studio.

http://www.ia.omron.com/sysmac_library/

Typical Models

Product Features		Model
Vibration Suppression Library	The Vibration Suppression Library is used to suppress residual vibration caused by the operation of machines.	SYSMAC-XR006
Device Operation Monitor Library	The Device Operation Monitor Library is used to monitor the operation of devices such as air cylinders, sensors, motors, and other devices.	SYSMAC-XR008
Dimension Measurement Library	The Dimension Measurement Library is used to dimension measurement with ZW-7000/5000 Confocal Fiber Displacement Sensor, or E9NC-TA0 Contact-Type Smart Sensor.	SYSMAC-XR014

Accessories

Optional Hardware

Product name	Specifications	Model
	Book mount	NY000-AB00
Iounting Brackets *1	Wall mount	NY000-AB01
SD Memory Cards	Card type: SD Card Capacity: 2 GB Format: FAT16	HMC-SD291
	Card type: SDHC Card Capacity: 4 GB Format: FAT32	HMC-SD491
ISB Flash Drives	Capacity: 2 GB	FZ-MEM2G
	Capacity: 8 GB	FZ-MEM8G
	Storage type: HDD Capacity: 320 GB	NY000-AH00
Storage Devices	Storage type: SSD SLC Capacity: 32 GB	NY000-AS00
Storage Devices	Storage type: SSD SLC Capacity: 64 GB	NY000-AS01
	Storage type: SSD MLC Capacity: 128 GB	NY000-AS02
USB Type-A to USB Type-B	Cable length: 2 m USB 2.0 Minimum bend radius: 25 mm	FH-VUAB 2M
Cables	Cable length: 5 m USB 2.0 Minimum bend radius: 25 mm	FH-VUAB 5M
DVI Cables	Cable length: 2 m Supports DVI-D Minimum bend radius: 36 mm	NY000-AC00 2M
DVICables	Cable length: 5 m Supports DVI-D Minimum bend radius: 36 mm	NY000-AC00 5M
ndustrial Monitor	 LCD touchscreen Multi-touch functionality Supply voltage: 24 VDC Up to 1,280 x 800 pixels at 60 Hz 2 USB Type-A Connectors Programmable brightness control Standard and 100 m cable models are available. 	NYM1□W-C10□□
Power Supply	Output voltage: 24 VDC Push-In Plus terminal blocks	S8VK-S0024
JPS * 2	Output voltage during backup operation: 24 VDC ± 5%	S8BA
UPS Communication Cable	Cable length: 2 m Signals for • Signal output (BL, TR, BU, WB) • Remote ON/OFF input • UPS Stop Signal input (BS)	S8BW-C02

*1. Select the required type. Industrial Box PC type only.*2. Revision number 04 or higher.

The revision number of the UPS can be retrieved from the serial number label on the product and the product packaging.

1	2 3 4
Item	Description
1	Product code
2	Product period and sequential number
3	Revision number
4	RoHS status

Spare Parts

The following spare parts for the Industrial PC are available.

Product name	Specifications	Model
Battery	One battery is supplied with the Industrial PC. The battery supplies power to the real-time clock. The battery is located inside the Industrial PC. Service life: 5 years at 25°C	CJ1W-BAT01
Fan Unit	The Fan Unit is available for the Industrial PC that has active cooling. Service life: 70,000 hours of continuous operation at 40°C with 15% to 65% relative humidity. Shelf life: 6 months This is the storage limitation with no power supplied.	NY000-AF00
Accessory Kit	Replacement kit containing all accesories supplied with Industrial PC. • Power connector • //O connector • Drive bracket for drive installation • 4 mounting screws for drive installation • PCIe Card support for PCIe Card installation • PCIe Card clip for PCIe Card installation	NY000-AK00

Installed Support Software

Item	Specifications
Industrial PC Support Utility	The Industrial PC Support Utility is a software utility to assist in diagnosing and resolving problems of the Industrial PC.
	It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial PC Tray Utility	The Industrial PC Tray Utility is a software utility that provides information about the current state of the Industrial PC, its related devices, and associated software. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial PC System API	The Industrial PC System API allows programmers to create programs that can retrieve information or set an indicator status of the Industrial PC. The API makes use of the included IPC System Service to manage the hardware. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial Monitor Utility	The Industrial Monitor Utility provides a user interface to control settings and display details of connected Industrial Monitors. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial Monitor Brightness Utility	The Industrial Monitor Brightness Utility is a small software utility that allows you to control the brightness of the screen backlight of all connected Industrial Monitors. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial Monitor API	The Industrial Monitor API allows programmers to create applications that can control the hardware features and retrieve information from connected Industrial Monitors. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial PC Rescue Disk Creator	The Industrial PC Rescue Disk Creator creates a USB Rescue Disk which can be used to back-up and restore the Omron IPC Operating System. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.

Recommended EtherCAT and EtherNet/IP Communications Cables

Use a straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (aluminum tape and braiding) for EtherCAT. For EtherNet/IP, required specification for the communications cables varies depending on the baud rate.

For 100BASE-TX/10BASE-T, use a straight or cross STP (shielded twisted-pair) cable of category 5 or higher.

For 1000BASE-T, use a straight or cross STP cable of category 5e or higher with double shielding (aluminum tape and braiding).

Cabel with Connectors

Item	Appearance	Recommended manufacturer	Cable length (m)	Model
			0.3	XS6W-6LSZH8SS30CM-Y
Cable with Connectors on Both Ends (RJ45/RJ45) Standard RJ45 plugs type * 1			0.5	XS6W-6LSZH8SS50CM-Y
		OMPON	Intervention Image: second secon	XS6W-6LSZH8SS100CM-Y
Wire Gauge and Number of Pairs: AWG26, 4-pair Cable Cable Sheath material: LSZH *2	**	OMRON	2	XS6W-6LSZH8SS200CM-Y
Cable color: Yellow *3	47°		3	XS6W-6LSZH8SS300CM-Y
			5	XS6W-6LSZH8SS500CM-Y
			0.3	XS5W-T421-AMD-K
Cable with Connectors on Both Ends (B145/D145)			0.5	XS5W-T421-BMD-K
Cable with Connectors on Both Ends (RJ45/RJ45) Rugged RJ45 plugs type *1		OMPON	1	XS5W-T421-CMD-K
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable	<i>*</i> O	OMRON	2	XS5W-T421-DMD-K
Cable color: Right blue			5	XS5W-T421-GMD-K
			10	XS5W-T421-JMD-K
	2-pair Cable MRON 2 XS5W-T4 5 XS5W-T4 10 XS5W-T4 10 XS5W-T4 10 XS5W-T4 1 XS5W-T4 2 XS5W-T4 2 XS5W-T4 3 XS5W-T4 5 XS5W-T4 5 XS5W-T4 5 XS5W-T4		0.5	XS5W-T421-BM2-SS
Cable with Connectors on Both Ends (M12 Straight/M12 Straight)			1	XS5W-T421-CM2-SS
Shield Strengthening Connector cable *4		XS5W-T421-DM2-SS		
M12/Smartclick Connectors Wire Gauge and Number of Pairs: AWG22, 2-pair Cable	0	OMRON	(m) 0.3 0.5 1 2 3 5 0.3 0.5 1 2 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 5 10 0 5 5 1 2 3 5 5 10 0 5 5 1 2 3 5 5 5 1 2 3 5 5 5 5 5 5 5 5 5 5 5 5 5	XS5W-T421-EM2-SS
Cable color: Black			5	XS5W-T421-GM2-SS
			(m) 0.3 0.5 1 2 3 5 0.3 0.5 1 2 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 1 2 3 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 10 0.5 5 5 5 5 5 5 5 5 5 5 5 5 5	XS5W-T421-JM2-SS
			0.5	XS5W-T421-BMC-SS
Cable with Connectors on Both Ends (M12 Straight/RJ45)		OMRON 0.3 XS6W-6 0.5 XS6W-6 1 XS6W-6 2 XS6W-6 3 XS6W-6 5 XS6W-6 5 XS6W-6 0.3 XS5W-7 0.5 XS5W-7 1 XS5W-7 10 XS5W-7 10 XS5W-7 1 XS5W-7 1 XS5W-7 1 XS5W-7 1 XS5W-7 10 XS5W-7 10 XS5W-7 10 XS5W-7 1 XS5W-7 1 XS5W-7 1 XS5W-7 2 XS5W-7 3 XS5W-7 3 XS5W-7 5 XS5W-7 5 </td <td>XS5W-T421-CMC-SS</td>	XS5W-T421-CMC-SS	
Shield Strengthening Connector cable *4 M12/Smartclick Connectors	s: AWG26, 4-pair Cable OMRON 2 XS6W-6LSZH8SS 2 XS6W-6LSZH8SS 3 XS6W-6LSZH8SS 3 XS6W-6LSZH8SS 5 XS6W-6LSZH8SS 5 XS6W-6LSZH8SS 5 XS6W-6LSZH8SS 5 XS6W-6LSZH8SS 5 XS6W-6LSZH8SS 5 XS6W-6LSZH8SS 5 XS6W-6LSZH8SS 5 XS5W-T421-AMD 0.5 XS5W-T421-BMD 0.5 XS5W-T421-DMD 2 XS5W-T421-DMD 5 XS5W-T421-DMD 5 XS5W-T421-DMD 6.5 XS5W-T421-DMD 0.5 XS5W-T421-DMD 7 0.5 XS5W-T421-DMD 1 8: AWG22, 2-pair Cable 0 0 SSW-T421-DMD 5 XS5W-T421-CMD 3 XS5W-T421-CMD 6 XS5W-T421-CMD 3 XS5W-T421-CMD 6 XS5W-T421-GMD 1 XS5W-T421-GMD 7 XS5W-T421-SMD 0.5 XS5W-T421-GMD 8 AWG22, 2-pair Cable 0 SSW-T421-DMD 8: AWG22, 2-pair Cable 0 SSW-T421-CMD 3	XS5W-T421-DMC-SS		
Rugged RJ45 plugs type		XS5W-T421-EMC-SS		
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable Cable color: Black		5	XS5W-T421-GMC-SS	
			10	XS5W-T421-JMC-SS

*1. Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the *Industrial Ethernet Connectors Catalog* (Cat. No. G019).

*2. The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.

*3. Cable colors are available in yellow, green, and blue.

***4.** For details, contact your OMRON representative.

Cables / Connectors

	Item	Recommended manufacturer	Model	
Products for EtherCAT or			Hitachi Metals, Ltd.	NETSTAR-C5E SAB 0.5 \times 4P *1
EtherNet/IP (1000BASE-T/100BASE-TX)	Wire Gauge and Number of Pairs: AWG24, 4-pair Cable	Cables	Kuramo Electric Co.	KETH-SB *1
			SWCC Showa Cable Systems Co.	FAE-5004 *1
		RJ45 Connectors	Panduit Corporation	MPS588-C *1
		Cables	Kuramo Electric Co.	KETH-PSB-OMR *2
			JMACS Japan Co., Ltd.	PNET/B *2
Products for EtherCAT or EtherNet/IP (100BASE-TX/10BASE-T)	Wire Gauge and Number of Pairs: AWG22, 2-pair Cable	RJ45 Assembly Connector	OMRON	XS6G-T421-1 *2

***1.** We recommend you to use above Cable, and RJ45 Connector together.

***2.** We recommend you to use above Cable, and RJ45 Assembly Connector together.

Note: Connect both ends of cable shielded wires to the connector hoods.

Specifications

Performance Specifications Supported by NY500-100

					NY5□□-		
		Item		15	14□□	13□□	
Processing	Instruction	LD instruction		0.33 ns			
time	execution times	Math instructions (for Long Real Data)		1.2 ns or more			
		Size		40 MB			
	Program capacity *1	Neuropean	POU definition	3,000			
	4.1	Number	POU instance	24,000			
D		No retain	Size	64 MB			
Programming		attribute	Number	180,000			
	Variables capacity	Datain attaileate	Size	4 MB			
		Retain attribute	Number	40,000			
	Data type	Number	•	4,000			
Unit configuration	Maximum number of connectable units	Maximum numbe	r of NX unit on the system	4,096 (on NX series	EtherCAT slave termin	al)	
	Number of controlled axes	Maximum number of controlled axes		Maximum number of axes which can be defined. The number of controlled axes = The number of motion control ax + The number of single-axis position control axes.		r of motion control axes	
				64 axes	32 axes	16 axes	
			Motion control axes	Maximum number of motion control axes which can be defined. Al motion control function is available.			
				64 axes	32 axes	16 axes	
		Maximum number of used real axes		Maximum number of The Number of used encoder axes.	used real axes. real axes includes follo	owing servo axes and	
Motion			Used motion control servo axes	available. The number of used	he number of used motion control servo axes = The num notion control axes whose axis type is set to servo axis and		
				64 axes	32 axes	16 axes	
		Maximum numbe axis control	Maximum number of axes for linear interpolation axis control		4 axes per axes group		
		Number of axes for a	circular interpolation axis control	2 axes per axes group			
	Maximum number o	f axes groups		32 axes groups			
	Motion control perio	lotion control period		The same control period as that is used for the process data communications cycle for EtherCAT.			
		Number of cam	Maximum points per cam table	65,535 points			
	Cams	data points	Maximum points for all cam tables	1,048,560 points			
		Maximum numbe	r of cam tables	640 tables			
	Position units			Pulses, millimeters, r	nicrometers, nanomete	ers, degrees and inches	
	Override factors			0.00% or 0.01% to 50	00.00%		

*1. This is the capacity for the execution objects and variable tables (including variable names).

NY5□□-1

		Item			NY5□□-	
		item		15	14□□	13
	Number of port			1		
	Physical layer			10BASE-T/100BASE-TX/1000BASE-T		
	Frame length			1,514 max.		
	Media access method	od		CSMA/CD		
	Modulation			Baseband		
	Topology			Star		
	Baud rate			1Gbps (1000BASE-T	Γ)	
	Transmission media	a		STP (shielded, twisted	d-pair) cable of Ethernet ca	tegory 5, 5e or high
	Maximum transmiss	sion distance betwe	en Ethernet switch and node	100 m		
	Maximum number o	of cascade connecti	ons	There are no restricti	ions if Ethernet switch is ι	used.
		Maximum number	r of connections	128		
		Packet interval *2	2	1 to 10,000 ms in 1.0 Can be set for each o		
Built-in EtherNet/IP		Permissible comr	nunications band *3	20,000 pps including	heartbeat	
		Maximum number	r of tag sets	128		
EtherNet/IP Port		Tag types		Network variables		
- OIL	CIP service: Tag	Number of tags pe	r connection (i.e., per tag set)	8 (7 tags if Controller	r status is included in the	tag set.)
	data links (Cyclic communications)	Maximum link data size per node (total size for all tags)		184,832 byte		
		Maximum number of tag		256		
		Maximum data size per connection		1,444 bytes		
		Maximum number of registrable tag sets		128 (1 connection = 1 tag set)		
		Maximum tag set size		1,444 bytes (Two bytes are used if Controller status is included in the tag set		
	Multi-cast packet filter *4		Supported.			
		Class 3 (number of connections)		64 (clients plus serve	er)	
	Cip Message Service: explicit messages	UCMM (non-connection type)	Maximum number of clients that can communicate at one time	32	<u>,</u>	
			Maximum number of servers that can communicate at one time	32		
	Maximum number of TCP socket service		30			
	Number of port			1		
	Communications st	andard		IEC 61158 Type12		
	EtherCAT master sp	pecifications		Class B (Feature Pag	ck Motion Control complia	ant)
	Physical layer			100BASE-TX		
	Modulation			Baseband		
	Baud rate			100 Mbps (100Base-TX)		
	Duplex mode			Auto		
	Topology			Line, daisy chain, and branching		
Built-in	Transmission media	a		Twisted-pair cable of	category 5 or higher aight cable with aluminum	tape and braiding)
EtherCAT port	Maximum transmiss	sion distance betwe	en nodes	100 m		. 3,
	Maximum number o	of slaves		192		
	Range of node addr			1-512		
	Maximum process data size			Inputs: 5,736 bytes Outputs: 5,736 bytes (However, the maximum number of process data frames is 4.)		
	Maximum process of	data size per slave		Inputs: 1,434 bytes Outputs: 1,434 bytes	1	
	Communications cy	/cle		500 μs to 8 ms (in 250-μs increments)		
	Sync jitter			1 μs max.	,	
Internal clock				At ambient temperate At ambient temperate	ure of 55°C: -3.5 to +0.5 r ure of 25°C: -1.5 to +1.5 r ure of 0°C: -3 to +1 min e	nin error per month

*2. Data will be refreshed at the set interval, regardless of the number of nodes.
*3. "pps" means packets per second, i.e., the number of communications packets that can be sent or received in one second.
*4. As the EtherNet/IP port implements the IGMP client, unnecessary multi-cast packets can be filtered by using a switching hub that supports IGMP Snooping.

Some function specifications are common with the NJ/NX-series Machine Automation Controller. "CPU Unit" described in the *Function Specifications Supported by NY5*____100 means "Controller" in the NY Series.

Function Specifications Supported by NY500-100

		Item		NY500-1000	
	Function			I/O refreshing and the user program are executed in units that are calle tasks. Tasks are used to specify execution conditions and execution priority.	
Tasks		Periodically executed tasks		1	
		executed tasks	Maximum number of periodic tasks	3	
		Conditionally	Maximum number of event tasks	32	
		Conditionally executed tasks	Execution conditions	When Activate Event Task instruction is executed or when condition expression for variable is met.	
	/	Programs		POUs that are assigned to tasks.	
	POU (program organization	Function blocks		POUs that are used to create objects with specific conditions.	
	units)	Functions		POUs that are used to create an object that determine unique outputs the inputs, such as for data processing.	
	Programming languages	Types		Ladder diagrams *1 and structured text (ST)	
	Namespaces			A concept that is used to group identifiers for POU definitions.	
	Variables	External access of variables	Network variables	The function which allows access from the HMI, host computers, or othe Controllers	
			Boolean	BOOL	
			Bit strings	BYTE, WORD, DWORD, LWORD	
			Integers	INT, SINT, DINT,LINT, UINT, USINT, UDINT, ULINT	
			Real numbers	REAL, LREAL	
		Basic data	Durations	TIME	
		types	Dates	DATE	
			Times of day	TIME_OF_DAY	
	Data types		Date and time	DATE_AND_TIME	
			Text strings	STRING	
		Derivative data t		Structures, unions, enumerations	
		Structures	Function	A derivative data type that groups together data with different variable types.	
Programming			Maximum number of members	2048	
			Nesting maximum levels	8	
			Member data types	Basic data types, structures, unions, enumerations, array variables	
			Specifying member offsets	You can use member offsets to place structure members at any memo locations.	
		Unions	Function	A derivative data type that groups together data with different variable types.	
			Maximum number of members	4	
			Member data types	BOOL, BYTE, WORD, DWORD, LWORD	
		Enumerations	Function	A derivative data type that uses text strings called enumerators to exprevariable values.	
			Function	An array is a group of elements with the same data type. You specify the number (subscript) of the element from the first element to specify the element.	
	Data turna	Array specifications	Maximum number of dimensions	3	
	Data type attributes	specifications	Maximum number of elements	65535	
			Array specifications for FB instances	Supported.	
		Range specificat	ions	You can specify a range for a data type in advance. The data type can take only values that are in the specified range.	
	Libraries			User libraries	
	Control modes			position control, velocity control, torque control	
	Axis types			Servo axes, virtual servo axes, encoder axes, and virtual encoder axes	
	Positions that c	an be managed		Command positions and actual positions	
			Absolute positioning	Positioning is performed for a target position that is specified with an absolute value.	
Action		Single-axis	Relative positioning	Positioning is performed for a specified travel distance from the comman current position.	
Motion control	Single cuic	position control	Interrupt feeding	Positioning is performed for a specified travel distance from the position where an interrupt input was received from an external input.	
	Single-axis		Cyclic synchronous absolute positioning	A positioning command is output each control period in Position Contro Mode.	
		Single-axis	Velocity control	Velocity control is performed in Position Control Mode.	
		velocity control	Cyclic synchronous velocity control	A velocity command is output each control period in Velocity Control Mode.	
4 1 12		Single-axis torque control	Torque control	The torque of the motor is controlled.	

*1. Inline ST is supported. (Inline ST is ST that is written as an element in a ladder diagram.)

		Item		NY500-1000
			Starting cam operation	A cam motion is performed using the specified cam table.
		Single-axis synchronized control	Ending cam operation	The cam motion for the axis that is specified with the input parameter is ended.
			Starting gear operation	A gear motion with the specified gear ratio is performed between a master axis and slave axis.
			Positioning gear operation	A gear motion with the specified gear ratio and sync position is performed between a master axis and slave axis.
			Ending gear operation	The specified gear motion or positioning gear motion is ended.
			Synchronous positioning	Positioning is performed in sync with a specified master axis.
			Master axis phase shift	The phase of a master axis in synchronized control is shifted.
			Combining axes	The command positions of two axes are added or subtracted and the result is output as the command position.
		Single-axis manual	Powering the servo	The Servo in the Servo Drive is turned ON to enable axis motion.
		operation	Jogging	An axis is jogged at a specified target velocity.
			Resetting axis errors	Axes errors are cleared.
			Homing	A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.
			Homing with parameter	Specifying the parameter, a motor is operated and the limit signals, home proximity signal, and home signal are used to define home.
	Single-axis		High-speed homing	Positioning is performed for an absolute target position of 0 to return to home.
			Stopping	An axis is decelerated to a stop at the specified rate.
			Immediately stopping	An axis is stopped immediately.
			Setting override factors	The target velocity of an axis can be changed.
		Auxiliary	Changing the current position	The command current position or actual current position of an axis can be changed to any position.
		functions for	Enabling external latches	The position of an axis is recorded when a trigger occurs.
		single-axis	Disabling external latches	The current latch is disabled.
		control	Zone monitoring	You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).
			Enabling digital cam switches	You can turn a digital output ON and OFF according to the position of an axis.
Notion			Monitoring axis following error	You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.
ontrol			Resetting the following error	The error between the command current position and actual current position is set to 0.
			Torque limit	The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.
			Command position compensation	The function which compensate the position for the axis in operation.
			Start velocity	You can set the initial velocity when axis motion starts.
		Multi-axes coordinated control	Absolute linear interpolation	Linear interpolation is performed to a specified absolute position.
			Relative linear interpolation	Linear interpolation is performed to a specified relative position.
			Circular 2D interpolation	Circular interpolation is performed for two axes.
			Axes group cyclic synchronous absolute	A positioning command is output each control period in Position Control Mode.
			Resetting axes group errors	Axes group errors and axis errors are cleared.
			Enabling axes groups	Motion of an axes group is enabled.
		Auxiliary functions for multi-axes coordinated control	Disabling axes groups	
	Axes groups			Motion of an axes group is disabled.
			Stopping axes groups Immediately stopping axes groups	All axes in interpolated motion are decelerated to a stop. All axes in interpolated motion are stopped immediately.
			Setting axes group override factors	The blended target velocity is changed during interpolated motion.
			Reading axes group positions	The command current positions and actual current positions of an axes group can be read.
			Changing the axes in an axes group	The Composition Axes parameter in the axes group parameters can be overwritten temporarily.
		Cams	Setting cam table properties	The end point index of the cam table that is specified in the input parameter is changed.
			Saving cam tables	The cam table that is specified with the input parameter is saved in non- volatile memory in the CPU Unit.
	Common items		Generating cam tables	The cam table that is specified with the input parameter is generated from the cam property and cam node.
		Parameters	Writing MC settings	Some of the axis parameters or axes group parameters are overwritten temporarily.
			Changing axis parameters	You can access and change the axis parameters from the user program.

		Item		NY500-1000	
		Count modes		You can select either Linear Mode (finite length) or Rotary Mode (infinite length).	
		Unit conversions	Automatic acceleration/	You can set the display unit for each axis according to the machine. Jerk is set for the acceleration/deceleration curve for an axis motion or	
		Acceleration/ deceleration	deceleration control Changing the acceleration and	axes group motion. You can change the acceleration or deceleration rate even during	
		control	deceleration rates	acceleration or deceleration.	
		In-position check		You can set an in-position range and in-position check time to confirm when positioning is completed.	
		Stop method		You can set the stop method to the immediate stop input signal or limit input signal.	
		Re-execution of	motion control instructions	You can change the input variables for a motion control instruction during execution and execute the instruction again to change the target values during operation.	
Motion	Auxiliary functions	Multi-execution of motion control instructions (Buffer mode)		You can specify when to start execution and how to connect the velocities between operations when another motion control instruction is executed during operation.	
control		Continuous axes (Transition mode		You can specify the Transition Mode for multi-execution of instructions for axes group operation.	
			Software limits	Software limits are set for each axis.	
			Following error	The error between the command current value and the actual current value is monitored for an axis.	
		Monitoring functions	Velocity, acceleration rate, deceleration rate, torque, interpolation velocity, interpolation acceleration rate, and interpolation deceleration rate	You can set and monitor warning values for each axis and each axes group.	
		Absolute encoder support		You can use an OMRON 1S-series Servomotor or G5-Series Servomotor with an Absolute Encoder to eliminate the need to perform homing at startup	
		Input signal logic inversion		You can inverse the logic of immediate stop input signal, positive limit input signal, negative limit input signal, or home proximity input signal.	
	External interfact	e signals	The Servo Drive input signals listed on the right are used.	Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal, and interrupt input signal.	
Unit (I/O) management	EtherCAT slaves	Maximum numbe	er of slaves	192	
	Built-in EtherNet/IP port Internal Port	Communications TCP/IP functions CIP communications service	protocol	TCP/IP, UDP/IP	
			CIDR	The function which performs IP address allocations without using a class (class A to C) of IP address.	
			IP Forwarding	The function which forward IP packets between interfaces.	
			Packet Filter *2	Check the IP packet, the function to determine whether to receive the source IP address and TCP port number.	
			NAT	Function for transfer by converting the two IP address.	
			Tag data links	Programless cyclic data exchange is performed with the devices on the EtherNet/IP network.	
			Message communications	CIP commands are sent to or received from the devices on the EtherNet/IP network	
		TCP/IP	Socket services	Data is sent to and received from any node on Ethernet using the UDP or TCP protocol. Socket communications instructions are used.	
			FTP client	File can be read from or written to computers at other Ethernet nodes from the CPU Unit. FTP client communications instructions are used.	
		applications	FTP server	Files can be read from or written to the SD Memory Card in the CPU Uni from computers at other Ethernet nodes.	
			SNMP agent	Built-in EtherNet/IP port internal status information is provided to network management software that uses an SNMP manager.	
Communications		Supported	Process data communications	A communications method to exchange control information in cyclic communications between the EtherCAT master and slaves. This communications method is defined by CoE.	
		services	SDO communications	A communications method to exchange control information in noncyclic even communications between EtherCAT master and slaves. This communications method is defined by CoE.	
		Network scannin	g	Information is read from connected slave devices and the slave configuration is automatically generated.	
	EtherCAT port	DC (distributed c	lock)	Time is synchronized by sharing the EtherCAT system time among all EtherCAT devices (including the master).	
		Packet monitorin	g	The frames that are sent by the master and the frames that are received by the master can be saved. The data that is saved can be viewed with WireShark or other applications.	
		Enable/disable s	ettings for slaves	The slaves can be enabled or disabled as communications targets.	
		Disconnecting/co	onnecting slaves	Temporarily disconnects a slave from the EtherCAT network for maintenance, such as for replacement of the slave, and then connects the slave again.	
		Supported application protocol	СоЕ	SDO messages of the CAN application can be sent to slaves via EtherCAT.	
	Communications			The following instructions are supported. CIP communications instructions, socket communications instructions, SDO message instructions, FTP client instructions, and Modbus RTU protcol instructions.	

*2. Internal Port only.

vent logs nline editing orced refreshing C test run ynchronizing ifferentiation mo	Maximum number of forced variables onitoring Maximum numbe Types	Single triggered trace Continuous trace r of simultaneous data trace	Events are recorded in the logs. 2,048 1,024 1,024 Programs, function blocks, functions, and global variables can be changed online. Different operators can change different POUs across a network. The user can force specific variables to TRUE or FALSE. 64 Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. 4
nline editing product refreshing C test run ynchronizing	number of events Single Maximum number of forced variables onitoring Maximum numbe Types Maximum numbe Sampling	Access event log User-defined event log Device variables for EtherCAT slaves er of contacts Single triggered trace Continuous trace er of simultaneous data trace	1,024 1,024 Programs, function blocks, functions, and global variables can be changed online. Different operators can change different POUs across a network. The user can force specific variables to TRUE or FALSE. 64 Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
nline editing product refreshing C test run ynchronizing	events Single J Maximum number of forced variables onitoring Maximum numbe Types Maximum numbe Sampling	User-defined event log Device variables for EtherCAT slaves er of contacts Single triggered trace Continuous trace er of simultaneous data trace	 1,024 Programs, function blocks, functions, and global variables can be changed online. Different operators can change different POUs across a network. The user can force specific variables to TRUE or FALSE. 64 Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
C test run ynchronizing	Single Maximum number of forced variables onitoring Maximum numbe Types Maximum numbe Sampling	Device variables for EtherCAT slaves er of contacts Single triggered trace Continuous trace er of simultaneous data trace	 Programs, function blocks, functions, and global variables can be changed online. Different operators can change different POUs across a network. The user can force specific variables to TRUE or FALSE. 64 Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
C test run ynchronizing	Maximum number of forced variables onitoring Maximum numbe Types Maximum numbe Sampling	slaves er of contacts Single triggered trace Continuous trace er of simultaneous data trace	online. Different operators can change different POUs across a network. The user can force specific variables to TRUE or FALSE. 64 Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
C test run ynchronizing ifferentiation mo	Maximum number of forced variables onitoring Maximum numbe Types Maximum numbe Sampling	slaves er of contacts Single triggered trace Continuous trace er of simultaneous data trace	The user can force specific variables to TRUE or FALSE. 64 Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
C test run ynchronizing ifferentiation mo	Maximum number of forced variables onitoring Maximum numbe Types Maximum numbe Sampling	slaves er of contacts Single triggered trace Continuous trace er of simultaneous data trace	 64 Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
ynchronizing	number of forced variables onitoring Maximum numbe Types Maximum numbe Sampling	slaves er of contacts Single triggered trace Continuous trace er of simultaneous data trace	Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
ynchronizing	onitoring Maximum numbe Types Maximum numbe Maximum numbe Sampling	Single triggered trace Continuous trace r of simultaneous data trace	The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
ifferentiation mo	Maximum numbe Types Maximum numbe Maximum numbe Sampling	Single triggered trace Continuous trace r of simultaneous data trace	made the same when online. Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
ifferentiation mo	Maximum numbe Types Maximum numbe Maximum numbe Sampling	Single triggered trace Continuous trace r of simultaneous data trace	Rising/falling edge of contacts can be monitored. 8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
	Maximum numbe Types Maximum numbe Maximum numbe Sampling	Single triggered trace Continuous trace r of simultaneous data trace	8 When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
ata tracing	Types Maximum numbe Maximum numbe Sampling	Single triggered trace Continuous trace r of simultaneous data trace	When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
ata tracing	Maximum numbe Maximum numbe Sampling	Continuous trace r of simultaneous data trace	taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
ata tracing	Maximum numbe Maximum numbe Sampling	er of simultaneous data trace	the Sysmac Studio.
ata tracing	Maximum numbe Sampling		4
ata tracing	Sampling	r of records	
ata tracing			10,000
ata tracing	Timing of sampling	Maximum number of sampled variables	192 variables
		ng	Sampling is performed for the specified task period, at the specified time, or when a sampling instruction is executed.
	Triggered traces		Trigger conditions are set to record data before and after an event.
	33		When BOOL variable changes to TRUE or FALSE Comparison of non-
		Trigger conditions	BOOL variable with a constant Comparison Method: Equals (=), Greater than (>), Greater than or equals (\geq), Less Than (<), Less than or equals (\leq), Not equal (\neq)
		Delay	Trigger position setting: A slider is used to set the percentage of sampling before and after the trigger condition is met.
Simulation			The operation of the CPU Unit is emulated in the Sysmac Studio.
	Controller errors	Levels	Major fault, partial fault, minor fault, observation, and information
Self-diagnosis	User-defined errors		User-defined errors are registered in advance and then records are created by executing instructions.
		Levels	8 levels
	CPU unit names and serial IDs		When going online to a CPU Unit from the Sysmac Studio, the CPU Unit name in the project is compared to the name of the CPU Unit being connected to.
-		User program transfer with no restoration information	You can prevent reading data in the CPU Unit from the Sysmac Studio.
rotecting	Protection	CPU unit write protection	You can prevent writing data to the CPU Unit from the Sysmac Studio or SD Memory Card.
oftware assets ad preventing	Overall project file protection	You can use passwords to protect .smc files from unauthorized opening on the Sysmac Studio.	
istakes		Data protection	You can use passwords to protect POUs on the Sysmac Studio.
	Verification of operation authority		Online operations can be restricted by operation rights to prevent damage to equipment or injuries that may be caused by operating mistakes.
		Number of groups	5
	Verification of user program execution ID		The user program cannot be executed without entering a user program execution ID from the Sysmac Studio for the specific hardware (CPU Unit).
ocation to store			Shared folder: The folder that exist on the HDD / SDD that Windows is running.
	Memory card ope	eration instructions	You can access Memory Cards from instructions in the user program.
pplication	File operations fr	rom the Sysmac Studio	You can perform file operations for Controller files in the Memory Card and read/write general-purpose document files on the computer.
	File operations fr	om FTP Client/Server	You can store and read files by the FTP client function and FTP server function.
		Using system-defined variables	You can use system-defined variables to backup or compare data.
D memory ard backup	Operation	Memory card operations dialog box on Sysmac Studio	Backup and verification operations can be performed from the SD Memory Card Operations Dialog Box on the Sysmac Studio.
inctions		Using instruction	Backup operation can be performed by using instruction.
	Protection	Prohibiting backing up data to the SD memory card	Prohibit SD Memory Card backup functions.
	antuallau baaluu d		Backup, restore, and verification operations for Units can be performed
	erating stakes cation to store plication memory d backup lictions	erating stakes Verification of op Verification of op Verification of us cation to store plication File operations fr File operations fr File operations fr Operation Protection	memory Memory card operation instructions File operations from the Sysmac Studio File operations from TFP Client/Server Operation Memory card operation instructions File operations from the Sysmac Studio File operations from FTP Client/Server Operation Memory card operation instructions File operations from Server Using system-defined variables Memory card operation Operation Protection Prohibiting backing up data to

Performance Specifications

	Ite	m		NY5□□-1□00	
		CPU type		Intel [®] Core [™] i7-4700EQ	
		Cores / Threa	ıds	4/8	
		CPU base frequency		2.4 GHz	
	CPU	Maximum tur	bo frequency	3.4 GHz	
		Cache		6 MB	
		Cooling deta	ils	Requires active cooling (fan)	
		Memory size		8 GB	
Main system	Memory	Memory type		DDR3L (non ECC)	
		memory type		Ensure the integrity of the platform	
	Trusted platform module (TPM)			Disk encryption Password protection and other uses of encryption	
	Graphics contr	rollor		Intel [®] HD Graphics. Up to two independent screens.	
	Graphics contr	loller		Intel [®] HD Graphics 4600	
	Watchdog			Yes	
Operating system	Windows OS			Windows Embedded Standard 7 - 32 bit *1 Windows Embedded Standard 7 - 64 bit	
				320 GB	
		Hard disk dri	ve	Serial ATA 3.0	
Storage devices	Drives	Solid state	SLC type	32 GB and 64 GB Serial ATA 3.1	
-		drive	MLC type	• 128 GB • Serial ATA 3.1	
	Drive bay (HDD/SSD) *2		1	2	
	Power connect	tor		• 24 VDC	
	I/O connector			2 inputs (Power ON/OFF Input and UPS Mode Input) and 1 output (Power Status Output	
		Number of ports		2	
	USB 2.0 Type-A	Maximum current		500 mA	
		Maximum cable length		5 m	
		Number of ports		2	
Connectors	USB 3.0 Type-A	Maximum current		900 mA	
		Maximum cable length		3 m	
	Ethernet		vailable ports	3	
	connectors	Physical laye	-	10BASE-T, 100BASE-TX or 1000BASE-T	
		Video interfa		Digital or analog	
	DVI-I	Resolution		Up to 1,920 x 1,200 pixels at 60 Hz	
	connector		I cable length	Dependent upon connected monitor type and resolution	
	RS-232C	Maximum Dv	r cable length	Standard SUBD9 connector (Non-Isolated)	
	n3-2320	Video interfa			
	DVI-D	Resolution	Le	Digital only Up to 1.920 x 1.200 pixels at 60 Hz	
	DVI-D		achle length		
Optional		Video interfa	I cable length	Dependent upon connected monitor type and resolution Digital only	
connector (select		Resolution	ce		
one per system)	NV Monitor		20	1,280 x 800 pixels at 60 Hz	
	NY Monitor Link	Connector ty Cable shieldi	-	RJ45 S/FTP, Cat.6A, 100 m	
		max. length USB data thr	ouahput	280 Mbps max.	
	Configuration		J 1	X4 (4 lanes) up to Gen 3	
PCIe Card Slot	Card height			Standard height cards, 4.20 inches (106.7 mm) *3	
	Card length			Half length cards, 6.6 inches (167.65 mm)	
	Model			CJ1W-BAT01	
Battery	Service life				
				5 years at 25°C NY000-AF00	
Fan unit	Model				
Fair unit	Service life			70,000 hours of continuous operation at 40°C with 15% to 65% relative humidity	

*1. For the 32 bit version, consult your OMRON sales representative.
*2. Depending on the model one or two drives are supported.
*3. Low profile cards, 2.536 inches (64.4 mm) are not supported.

Display Specifications

		Item	Speci	fications
		nem	12.1 Inch models	15.4 Inch models
		Display device	TFT LCD	
		Screen size	12.1 inches	15.4 inches
		Surface treatment	Anti glare treatment	
		Surface hardness	Mohs scale: 5 - 6	
	Display panel	Resolution	1,280 × 800 pixels at 60 Hz (horizontal × vertical)	
	*1	Colors	16,770,000 colors	
		Effective display area	261 × 163 mm (horizontal × vertical)	331×207 mm (horizontal × vertical)
Diamlass		View angles	Left: 60°, Right: 60°, Top: 60°, Bottom: 60°	
Display		Life	50,000 hours min. *2	
		Brightness adjustment	200 levels *3	
		Technology	Projected capacitive	
		Touch resolution	Touch accuracy 1.5% (4-5 mm)	
	Touch	Multitouch	Up to 5 simultaneous touches	
	TOUCH	Features	Water detection *4, hand palm rejection *5, gloves *6	
		Life	50,000,000 operations min.	
		EMC	Correct touchscreen operation is possible within allowable EMC immunity con	

Note: Industrial Panel PC type only.

*1. There may be some defective pixels in the display. This is not a fault as long as the numbers of defective light and dark pixels fall within the following standard range: light and dark pixels 10 or less. (There must not be 3 consecutive light/dark pixels.)

*2. This is the estimated time before brightness is reduced by half at room temperature and humidity.

The life expectancy is drastically shortened if used at high temperatures.

*3. If the brightness is set to very dark, it causes flickering or the screen will be too dark to use.

***4.** If water is detected the touch functionality will not be available.

***5.** If a palm is detected that specific area is neglected.

*6. The touchscreen can be operated when wearing gloves. Check correct usage of the gloves before using them.

Electrical Specifications

	Item		NY51⊡ Industrial Box PC type	NY53⊡ Industrial Panel PC type	
Rated power supply volt	age		24 VDC, non-isolated		
Allowable power supply	voltage range		20.4 to 28.8 VDC		
Grounding method			Ground to less than 100 Ω		
Inrush current			At 24 VDC: 12 A / 6 ms max. for cold start at	room temperature	
Overvoltage category			JIS B3502 and IEC 61131-2: Category II		
EMC immunity level			IEC 61131-2: Zone B		
RTC accuracy			At ambient temperature of 55° C: -3.5 to +0.5 min error per month At ambient temperature of 25° C: -1.5 to +1.5 min error per month At ambient temperature of 0° C: -3 to +1 min error per month		
Power button life			100,000 operations		
Battery life			5 years at 25°C (for battery CJ1W-BAT01)		
Fan life			8 years of continuous operation at 40°C		
	Maximum power consumption including drives and expansions		114 W	132 W	
		wer consumption ves and expansions	81 W	99 W	
		HDD 320 GB	2 W		
Power consumption *	Drives	SSD SLC 32 GB	2 W		
		SSD SLC 64 GB	2 W		
		SSD MLC 128 GB	2 W		
	Expensions	USB	14 W max. ((2 x 500 mA at 5 V) + (2 x 900 m	A at 5 V))	
	Expansions PCIe		15 W max.	5 W max.	

Note: Refer to the NY-series IPC Machine Controller Industrial Panel PC Hardware User's Manual (W557) or the NY-series IPC Machine Controller Industrial Box PC Hardware User's Manual (W556) for detail.

* The total power consumption is the sum of the power consumption of all items that are installed in your Industrial PC.

To guarantee S8BA UPS operation in combination with our IPC, the specified combination of UPS and power-supply must be used. The required supply specifications for an Industrial PC with an Intel[®] Core™ i7-4700EQ CPU.

Item	Minimum power requirements
Power supply	240 W
UPS	120 W

Environmental Specifications

	ltem	Specifications			
	item	Industrial Box PC	Industrial Panel PC		
	Ambient operating temperature *1	0 to 55°C			
	Ambient storage temperature *1	-20 to 70°C			
	Ambient operating humidity *1	10% to 90% with no condensation			
	Ambient storage humidity *1	10% to 90% with no condensation			
	Operating atmosphere	No corrosive gases			
	Altitude	2,000 m max.			
	Noise resistance (during operation)	Conforms to IEC61000-4-4, 2 kV (power lines)			
Operation environment	Vibration resistance (during operation)	 Conforms to IEC 60068-2-6. For a Box PC with an SSD: 5 to 8.4 Hz with 3.5 mm single amplitude and 8.4 to 150 Hz with 9.8 m/s² for 10 times each in X, Y and Z directions. For a Box PC with a HDD the vibration resistance depends on the mounting orientation *2. 	 The vibration resistance depends on the storage device(s): For a Panel PC with only SSD storage devices: 5 to 8.4Hz with 3.5 mm single amplitude and 8.4 to 150 Hz with 9.8 m/s² for 10 times each in X, Y and Z directions. Conforms to IEC 60068-2-6. For a Panel PC with one or more HDD storage devices the Panel PC must be installed in a vibration free environment. *3 		
	Shock resistance (during operation)	Conforms to IEC 60068-2-27. 147 m/s ² , 3 times in each X, Y and Z directions			
	Installation method	Book mount, Wall mount	Mount on panel		
	Degree of protection *4	-	Front of Monitor: IP65		
	Pollution degree	2 or less: Conforms to JIS B3502 and IEC 61131-2.			
Applicable standards *5		EU Directives: EMC Directive 2014/30/EU (EN 61131-2) and RoHS Directive KC Registration, RCM, cULus			

***1.** The allowed ambient operating temperature and ambient humidity depend on product type, CPU type, mounting orientation, and storage device type. ***2.** Vibration resistance depends on the Box PC's mounting orientation and storage device type.

·	•	e ,1	
Mounting Orientation	SSD	HDD	
Book	9.8 m/s ²	2.5 m/s ²	
Wall	3.0 11/5	4.9 m/s ²	

***3.** A Panel PC with one or more HDD storage devices should not be used in applications subject to vibration.

Examples of applications subject to vibration: • AGV (Automated Guided Vehicles)

Tableting machine

- Connector pin assembling machine
- Rail vehicleStacker crane
- Bending machine

Elevator

Ensure your Panel PC with HDD does not vibrate. When in doubt use a Panel PC with SSD storage devices.

***4.** The Panel PC may not operate properly in locations subjected to oil splashes for extended periods of time. (Industrial Panel PC type only) ***5.** Refer to the OMRON website (www.ia.omron.com) or contact your OMRON representative for the most recent applicable standards for each model.

Storage Device Specifications

Item		Specifications				
Model	NY000-AS00	NY000-AS01	NY000-AS02	NY000-AH00 *1		
Capacity	32 GB	64 GB	128 GB	320 GB		
Туре	SSD (SLC)		SSD (MLC)	HDD		
S.M.A.R.T. support	Yes					
Rotation speed		5,400 r/min				
Interface	Serial ATA 3.1			Serial ATA 3.0		
Sustained standard read speed	Up to 160 MB/s		Up to 430 MB/s	-		
Sustained standard write speed	Up to 150 MB/s Up to 190 MB/s			-		
Operating temperature	0 to 70°C			5 to 55°C		
Operating humidity	10% to 95% (with no condens	 10% to 95% (with no condensation) 29°C wet-bulb temperature max. 				
Storage temperature	-40 to 100°C	-40 to 65°C				
Storage humidity	10% to 95% (with no condensation)			 8% to 90% (with no condensation) 40°C wet-bulb temperature max. 		
Life	1,500 TB written / 11 years at a daily workload of 350 GB	3,000 TB written / 23 years at a daily workload of 350 GB	114 TB written / 3 years at a daily workload of 100 GB	Approximately 5 years or 20,000 powered-ON hours (whichever comes first) under the following conditions: • 25°C at 101.3 kPa • Less than 333 powered-ON hours/ month *2 • Less than 20% operation while powered-ON *3 • Less than 1.30 x 10 ⁶ seeks/month		


*1. For a Panel PC with an HDD: this device can only be installed in a vibration free environment only.

*2. Powered-ON hours include sleep and standby modes.

***3.** Operation includes seeking, writing, and reading functions.

Dimensions


Industrial Box PC type

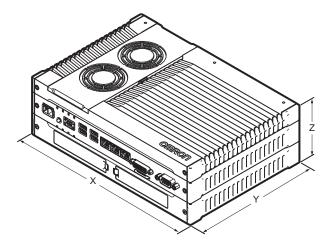

Item	Specifications
Dimensions	Width X = 282 mm Depth Y = 195 mm. Y = 200 mm including the DVI connectors. Height Z = 88.75 mm
Weight	3.8 kg


Bracket Specifications

The metal mounting brackets mount your Industrial Box PC and they are the connection for the functional ground. Use metal screws with a diameter of 4 mm or 5 mm to mount the brackets. Mounting screw locations for book mount and wall mount orientation:

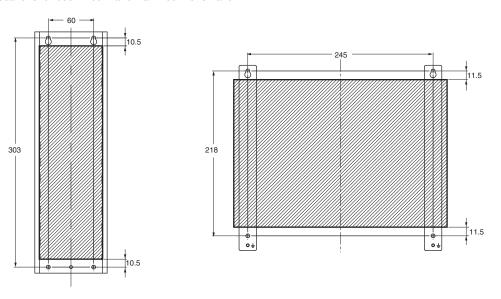

(Unit: mm)

Industrial Panel PC type

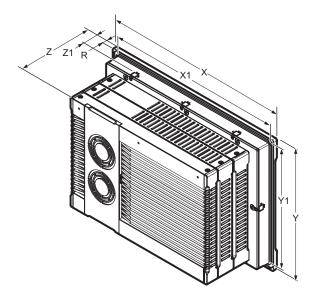

12.1 Inch	15.4 Inch		
Cutout Width X1 = 314^{-0+1} mm Cutout Height Y1 = 216^{-0+1} mm	Cutout Width X1 = 383^{-0+1} mm Cutout Height Y1 = 259^{-0+1} mm		
Panel thickness range Z1 = 1.6 to 6.0 mm	Panel thickness range Z1 = 1.6 to 6.0 mm		
Width X = 332 mm Height Y = 234 mm Depth Z = 121 mm	Width X = 401 mm Height Y = 277 mm Depth Z = 121 mm		
Rim thickness R = 8.0 mm			
6.1 kg	7.2 kg		
	Cutout Height Y1 = 216^{-0+1} mm Panel thickness range Z1 = 1.6 to 6.0 mm Width X = 332 mm Height Y = 234 mm Depth Z = 121 mm Rim thickness R = 8.0 mm		

* The minimum panel thickness depends on the panel material.

Version Information

Unit Versions

Units	Models	Unit Version
IPC Machine Controller	NY5⊟2-1	Unit version 1.14
		Unit version 1.12

Unit Versions and Programming Devices Supported by NY500-100

The following tables show the relationship between unit versions and Sysmac Studio versions. **Unit Versions and Programming Devices**

Unit Version *	Corresponding version of Sysmac Studio	
1.14	1.19	
1.14	1.18	
1.12	1.17	

* There is no NY5 $\Box\Box$ -1 with unit version 1.11 or earlier.

Note: If you use a lower version of the Sysmac Studio, you can use only the functions of the unit version of the unit that corresponds to the Sysmac Studio version.

If you use a unit with an earlier version, select the unit version of the connected unit or an earlier unit version in the Select Device Area of the Project Properties Dialog Box on the Sysmac Studio. You can use only the functions that are supported by the unit version of the connected unit.



Related Manuals

Refer to the Related Manuals in the data sheet of the NY-series Industrial Box PC or NY-series Industrial Panel PC for the Related Manuals.

Manual name	Cat. No.	Model numbers	Application	Description
NY-series IPC Machine Controller Industrial Panel PC Hardware User's Manual	W557	NY532-	Learning the basic specifications of the NY-series Industrial Panel PCs, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NY-series system is provided along with the following information on the Industrial Panel PC. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection
NY-series IPC Machine Controller Industrial Box PC Hardware User's Manual	W556	NY512-	Learning the basic specifications of the NY-series Industrial Box PCs, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NY-series system is provided along with the following information on the Industrial Box PC. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Setup User's Manual	W568	NY532 NY512	Learning the initial settings of the NY-series Industrial PCs and preparations to use Controllers.	The following information is provided on an introduction to the entire NY-series system. • Two OS systems • Initial settings • Industrial PC Support Utility • NYCompolet • Industrial PC API • Backup and recovery
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Software User's Manual	W558	NY532-000 NY512-000	Learning how to program and set up the Controller functions of an NY- series Industrial PC.	The following information is provided on NY-series Machine Automation Control Software. • Controller operation • Controller features • Controller settings • Programming based on IEC 61131-3 language specifications
NY-series Instructions Reference Manual	W560	NY532-000 NY512-000	Learning detailed specifications on the basic instructions of an NY- series Industrial PC.	The instructions in the instruction set (IEC 61131-3 specifications) are described.
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Motion Control User's Manual	W559	NY532 NY512	Learning about motion control settings and programming concepts of an NY-series Industrial PC.	The settings and operation of the Controller and programming concepts for motion control are described.
NY-series Motion Control Instructions Reference Manual	W561	NY532 NY512	Learning about the specifications of the motion control instructions of an NY-series Industrial PC.	The motion control instructions are described.
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Built-in EtherCAT [®] Port User's Manual	W562	NY532 NY512	Using the built-in EtherCAT port in an NY-series Industrial PC	Information on the built-in EtherCAT port is provided. This manual provides an introduction and provides information on the configuration, features, and setup.
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Built-in EtherNet/IP™ Port User's Manual	W563	NY532 NY512	Using the built-in EtherNet/ IP port in an NY-series Industrial PC.	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, and other features.
NY-series Troubleshooting Manual	W564	NY532 NY512	Learning about the errors that may be detected in an NY-series Industrial PC.	Concepts on managing errors that may be detected in an NY-series Controller and information on individual errors are described.
Sysmac Studio Version 1 Operation Manual	W504	SYSMAC-SE2	Learning about the operating procedures and functions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
UPS S8BA User's Manual	U702	S8BA	Learning the information that is necessary to use the Uninterruptible Power Supply (UPS) Unit.	An introduction to the UPS is provided along with the following information: • Overview • Preparation • Installation and Connection • Check and Start Operation • Maintenance and Inspection • Shutdown Processing • I/O Signal Functions • Troubleshooting

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation Industrial Automation Company